!uattro



Contents

The	C_{Ω}	ntro	l Pa	ne
		<i>.</i>		


The Programme Control Panel	3
Machine Audits	4
Drinks Settings	4
Restore Defaults	4
Temperature Settings	5
Clear Audits	5
Payment Settings	5
Auto Standby Settings	5
Flush	5
Cleaning & Maintenance	
Daily and Weekly Cleaning Schedules	6
Spare Parts Identifier	
Electronics	8
Water & Dispensing	9
Air Extraction	10
Cables	10
Chassis	10



Congratulations on choosing the Quattro. This is a versatile drinks dispenser with a comprehensive array of intuitive inbuilt features. Many of these can be simply controlled through settings on the Programme Control Panel.

The Programme Control Panel

The programming panel is located on the inside of the door. Pressing the 'Program' button opens a sub menu for the following (scroll through the sub menu using 'Up' and 'Down').

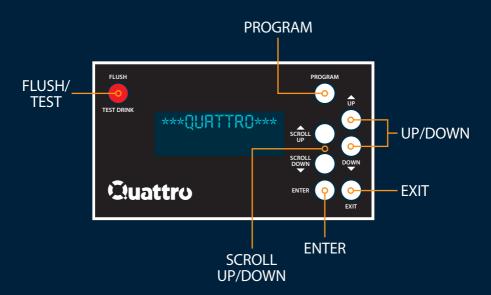

Machine Audits

- Press 'Enter' to open the menu.
- The display shows the total amount of drinks the machine has dispensed.
- Use 'Up' and 'Down' to view individual drinks dispensed.



Drink Settings

- Press 'Enter' to enter the menu.
- Use 'Up' and 'Down' to cycle through the available drinks.
- Once you have chosen a drink you would like to program, press 'Program'.
- Use 'Up' and 'Down' to increase or decrease the selected value.
- Use 'Scroll Up' and 'Scroll Down' to select the above or below ingredient.
- You can use the 'Flush' button to test the drink.
- When you are happy with how the drink tastes, please press 'Enter' to save the changes.



Restore Defaults

- Load Defaults Set A Defaults the machine back to factory settings. (7oz and 10oz).
- Factory Reset Restores all settings back to factory.
- Load Defaults Set B Defaults the machine back to factory settings. (10oz and 12oz).



Temperature Settings

- Press 'Enter' to open menu.
- Use 'Up' and 'Down' to increase or decrease the required temperature setting between 80-97°F.
- Once changed please press 'Enter' to save.



Clear Audits

 Clears the audit completely resetting the total amount of drinks back to '0'.



Payment Settings

• Not yet available.

Auto Standby Setting

 Press 'Enter' to enable or disable the auto standby feature. Once the desired setting has been selected please press 'Enter' to save.

OFF, 4HR, 3HR, 2HR, 1HR



Flush

 Press and hold the 'Flush' button to initiate a flush.




Cleaning Instructions


To ensure ongoing reliable operation of your drinks dispenser and to maintain the warranty, it is vital that the machine is cleaned regularly. Daily we recommend flushing the machine once in the morning and once at night. Weekly cleaning regimes are advised as follows:


Weekly Cleaning


Please complete the daily clean above and then follow the instructions below for the weekly clean.

- 1 Remove steam trap
 - see image 1
- 2 Push locking lever anti-clockwise
 - see image 2
- 3 Remove whipper bowl by pulling it towards you see image 3
- 4 Remove impellor by pulling it towards you see image 4
- 5 Turning locking lever further anti-clockwise will allow you to remove the base and seal see image (5)
- 6 Place all items in soapy water and scrub if necessary, ensure soap has been completely removed before refitting
- 7 Refit in reverse order, remembering to push locking levers clockwise see image 7.

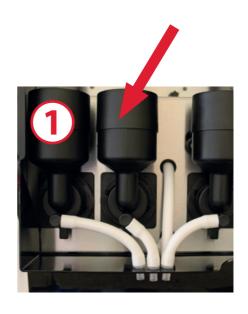

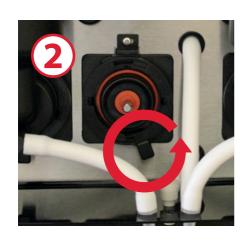

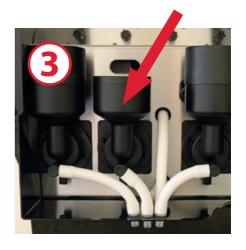

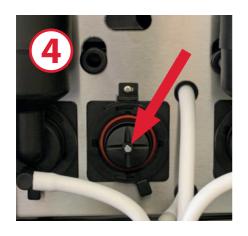









Spare Part Identifier

ELECTRONICS

ITEM	PART NO.	DESCRIPTION
1	K04-001	SWITCHING POWER SUPPLY
2	K04-002	DOWNLIGHT PCB
3	K04-003	PROGRAM/AUDIT PCB
4	K04-004	QUATTRO PROGRAM CONTROL BUTTON
5	K04-005	QUATTRO OUTPUT PCB
6	K04-006	QUATTRO FASCIA (7" LCD + MEDIA SCREEN)
7	K04-007	QUATTRO FASCIA (7" LCD + STATIC PICTURE)
8	K04-008	QUATTRO FASCIA (7" GRAPHIC DISPLAY + MEDIA SCREEN)
9	K04-009	QUATTRO FASCIA (7" GRAPHIC DISPLAY + STATIC PICTURE)
10	K04-010	MEMORY CARD (MEDIA SCREEN)
11	K04-011	MEMORY CARD (RASPBERRY Pi)
12	K04-012	4 WAY TERMINAL BLOCK
13	K04-013	5 WAY TERMINAL BLOCK

WATER & DISPENSING

ITEM	PART NO.	DESCRIPTION
14	T04-002	BOILER ASSEMBLY LESS VALVES (ITEMS 10-18)
15	T04-401	BOILER BODY
16	T01-402	BOILER TOP
17	A01-012	BOILER GASKET
18	H01-001	ELEMENT 3KW
19	T02-003	ELEMENT WASHER x 2
20	S01-005/1	LEVEL PROBE
21	S01-003/1	OVERFLOW PROBE
22	K02-013	THERMISTOR

Spare Part Identifier

WATER & DISPENSING cont.

ITEM	PART NO.	DESCRIPTION
23	B04-001	VALVE BOOT
24	B04-005	DISPENSE VALVE 12v
25	A01-001	INLET VALVE
26	W01-012	PUMP 12v
27	W01-002	WATER CARRIER 10LTR
28	O01-003	AUGER MOTOR 12v
29	O01-003/1	AUGER DRIVE PINION
30	B01-015	CANISTER - WITH WHEEL
31	B01-016	CANISTER - NO WHEEL
32	B01-008	ELBOW STRAIGHT
33	B01-018	ELBOW L/H (MILK)
34	B01-019	ELBOW R/H (CHOCOLATE)
35	B01-005	WHIPPER STEAM TRAP SEAL
36	B01-004	WHIPPER STEAM TRAP
37	B01-006	WHIPPER BOWL ADAPTOR
38	B01-026	WHIPPER MIXING BOWL
39	B01-025	WHIPPER IMPELLER BLADE
40	B01-024	WHIPPER BASE & SEAL
41	B01-007/2	WHIPPER SHAFT SEAL
42	B01-007/3	WHIPPER BASE O-RING
43	B01-028	WHIPPER PIPETTE
44	B01-022	WHIPPER SLINGER WASHER
45	B01-023	WHIPPER MOTOR 12V
46	B01-029	WHIPPER MOUNTING
47	T02-002	SILICON TUBE (Per Metre)
48	E01-001	DISPENSE NOZZLE
49	G01-001	ELBOW (BREATHER)



AIR EXTRACTION

ITEM	PART NO.	DESCRIPTION
50	J01-004	EXTRACTION DUCT
51	B03-001	FAN 12v
52	J01-001	FAN BOX

CABLES

ITEM	PART NO.	DESCRIPTION
53	A01-003	MAINS CABLE WITH PLUG
54	K04-014	LOOM SET
55	H02-004	STRAIN RELIEF BUSH

CHASSIS

ITEM	PART NO.	DESCRIPTION
56	T04-001	CHASSIS COMPLETE
57	J04-001	FRONT BASE
58	J01-020	DRIP TRAY (including grill)
59	T01-119	LOCK & KEYS (including cam)
60	T01-120	KEYS 92276 (per pair)
61	R01-026	FEET (each)
62	L04-001	DRINK SELECTION GRAPHIC SET
63	L04-002	SIDE OVALS



